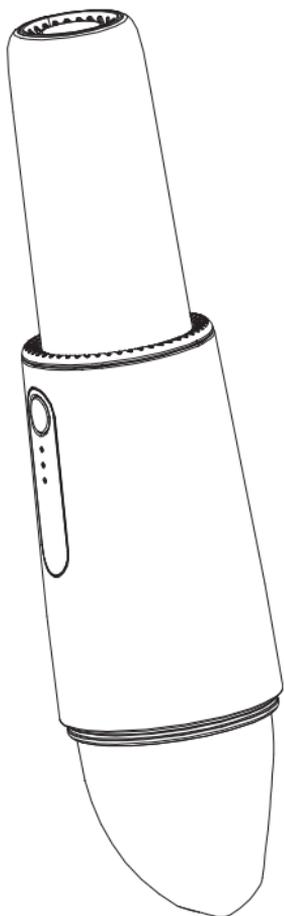




AEROSLIM™ HAND VACUUM

4139 SERIES

Important Safety Instructions.....	2
Product Overview	3
Charging the Battery.....	4
Using Your Hand Vacuum.....	5
Using the Accessory Tools.....	5
Emptying the Dirt Tank.....	6
Limited Warranty.....	7



SYMBOL	EXPLANATION
	Caution.
	Read operator's manual.
	Risk of fire.
	Risk of electric shock.

SYMBOL	EXPLANATION
	For indoor use only.
	Direct current.
	Recycle Li-Ion battery.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Recycle batteries, do not mix with household waste.
- Unplug USB connector from electrical socket when not in use, before cleaning, maintaining or servicing the appliance, and if your appliance has an accessory tool with a moving brush, before connecting or disconnecting the tool.
- This appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorized service center.
- Children should be supervised to ensure that they do not play with the appliance.
- The USB connector must be removed from the socket-outlet before cleaning or maintaining the appliance.
- This appliance contains lithium ion type batteries that are non-replaceable.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without Dirt tank or filters in place.
- Do not expose battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C/265°F may cause explosion.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not turn your hand vacuum ON until you are familiar with all instructions and operating procedures.
- Do not incinerate the appliance even if it is severely damaged. The batteries can explode in a fire.
- The battery must be removed from the appliance before it is scrapped.

- Do not use appliance in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Any other maintenance or servicing not included in this manual should be performed by an authorized service representative.
- DO not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.)
- COMMERCIAL USE OF THIS UNIT VOIDS THE MANUFACTURER'S WARRANTY.
- Do not operate the product when it is charging.

SAVE THESE INSTRUCTIONS

ORIGINAL INSTRUCTIONS. FOR OPERATION ON A DC 7.2V VOLT POWER SUPPLY ONLY. THIS APPLIANCE TO BE SUPPLIED AT SELV 7.2V DIRECT CURRENT. 1.5A WHEN IN CHARGING. THIS MODEL IS FOR HOUSEHOLD USE ONLY.

IMPORTANT INFORMATION

- Charging requires attachment to a compatible USB charger. USB charger not included.
- Charging cable to attach to USB charger included.

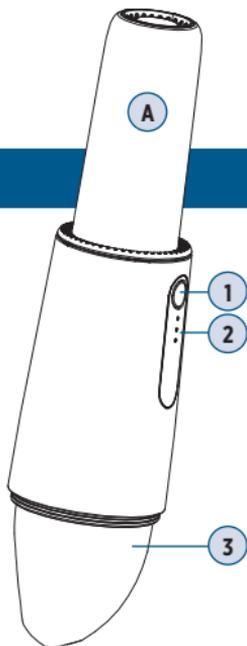
Product Overview

In the Box

- A. Hand Vacuum
- B. Brush and Crevice Tool
- C. Storage Stand
- D. (2) Replacement Filters
- E. Charging Cord

Product Features

1. Power Button
2. Power Lights
3. Dirt tank



B



C

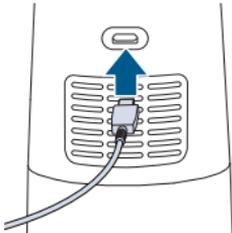
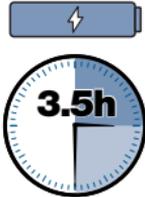


D

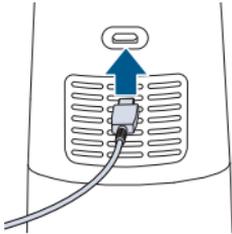
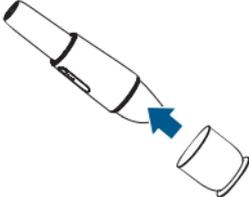
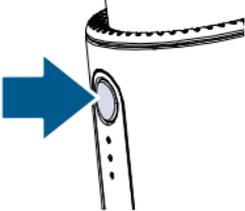


E

Charging the Battery

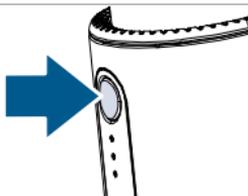
		
<p>1. Insert Charging Cord into the charging port on back of the machine.</p>	<p>2. Connect USB to adapter and into the wall outlet. Charge the machine completely for about 3.5 hours prior to first use.</p>	<p>3. The LED Power Lights will illuminate when charging.</p> <p>Full Charge: 3 solid lights</p> <p>Low Power: 1 solid light</p> <p>Charge Required: 1 blinking light</p>

Using Your Hand Vacuum

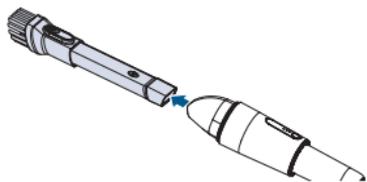
		
<p>1. Unplug the machine from the charging adapter.</p>	<p>2. Remove from base stand.</p>	<p>3. Press the Power Button to turn ON.</p>

IMPORTANT: Always turn machine OFF before charging. Failing to do so may result in battery not fully charging.

Using the Accessory Tools



1. Make sure the machine is turned OFF.



2. Attach tool to nozzle of hand vacuum. Turn machine ON.

Emptying the Dirt Tank

➤ Find replacement filters at BISSELL.com.



1. Twist dirt tank to remove from base.



2. Remove filter by pulling up from dirt tank. Empty dirt into waste container.



3. Separate filters by turning clockwise and pulling up. Tap filters on side of waste container to clean out dust.



4. When finished emptying the dirt tank, reassemble machine as shown above.



5. After heavy use, clean the filter and filter cup by washing gently by hand in warm water and mild dish detergent. Rinse thoroughly and make certain it is completely dry before reinserting it.

Limited Warranty

This limited warranty is provided by BISSELL® International Trading Company B.V. (“BISSELL”) and applies in Australia and New Zealand. It gives you specific rights. It is offered as an additional benefit to your rights under law. You also have other rights under The Australian Consumer Law or New Zealand Consumer Laws, whichever applies to you. You can find out about your legal rights and remedies by contacting your local consumer advice service. Nothing in this warranty will replace or lessen any of your legal rights or remedies. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care or contact your local distributor.

This warranty is given to the current owner of the product with the original sales receipt. The original sales receipt must include the product(s) purchased, the date purchased, and which country it was purchased from new. You must be able to evidence the date of purchase and show the product was purchased in Australia or New Zealand to submit a claim under this warranty. You will receive the warranty that is applicable to the country where your product was originally purchased, as shown on the original sales receipt. If you use the product outside of the country where it was purchased, your warranty may be void in BISSELL’s sole discretion. It may be necessary to obtain some of your personal information, such as a mailing address, to fulfill the terms of this warranty. Any personal data will be handled pursuant to BISSELL’s Privacy Policy, which can be found at global.BISSELL.com/privacy-policy.

Limited One-Year Warranty

For one year from the date of purchase by the original purchaser, subject to the *EXCEPTIONS AND EXCLUSIONS identified below, BISSELL will repair or replace (with new, refurbished, lightly used, or remanufactured components or products), at BISSELL’s option, free of charge, any defective or malfunctioning part or product.

BISSELL recommends that the original packaging and original proof of purchase with the date of purchase and country where purchased be kept for the duration of the warranty period in case you want to redeem the warranty during the warranty period. Keeping the original packaging will assist with any necessary re-packaging and transportation but is not a condition of the warranty.

If your product is replaced by BISSELL under this warranty, then the new item will benefit from the remainder of the term of this warranty (calculated from the date of the original purchase). The period of this warranty shall not be extended whether or not your product is repaired or replaced.

*Conditions of Warranty

This warranty applies to products used for personal domestic use and not commercial or

Limited Warranty (continued)

hire purposes. Consumable components and attachments such as filters, belts, shells, water tanks, scraping strips, brushes, and mop pads, which must be replaced or serviced by the user from time to time, are not covered by this warranty.

This warranty does not apply to any defect arising from fair wear and tear, including but not limited to the battery discharging time shortening due to the aging or use. Damage or malfunction caused by the user or any third party whether as a result of accident, negligence, abuse, neglect, or any other use not in accordance with the user guide is not covered by this warranty. An unauthorised repair (or attempted repair) may void this warranty whether or not damage has been caused by that repair/attempt. Removing or tampering with the Product Rating Label on the product or rendering it illegible will void this warranty.

Except as set out below, BISSELL and its distributors are not liable for any loss or damage that is not foreseeable or for incidental or consequential damages of any nature associated with the use of this product including without limitation loss of profit, loss of business, business interruption, loss of opportunity, distress, inconvenience, or disappointment. Except as set out below, BISSELL's liability will not exceed the purchase price of the product.

BISSELL does not exclude or limit in any way its liability for (a) death or personal injury caused by our negligence or the negligence of our employees, agents or subcontractors; (b) fraud or fraudulent misrepresentation; (c) or for any other matter which cannot be excluded or limited under law.

To make a claim under this warranty contact BISSELL Australia PTY LTD (details below). Contact BISSELL prior to returning any goods. Where agreed, BISSELL will reimburse reasonable postage / handling costs (if any) for returning goods to BISSELL. To claim expenses incurred in making a claim under this warranty please provide BISSELL with a copy of the receipt of the expenses by email or post.

For Australian Consumers Only: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Important Notes

Please keep your original sales receipt. It provides proof of the date of purchase and where it was purchased in the event of a warranty claim. See warranty for details.

Please note that using your BISSELL machine outside of its country of original purchase and/or use with a power converter may damage your BISSELL machine and damage caused by mismatched power voltage will not be covered by your warranty. *(continued)*

Limited Warranty (continued)

Consumer Care

If your BISSELL product should require service or to claim under our limited guarantee, please contact us.



Australia

Telephone: 1300 247 735

Website: BISSELL.com.au

Address: 789 Springvale Road,
Mulgrave, Victoria 3170

Email: consumercareau@bissell.com



New Zealand

Telephone: 0800 247 735

Website: BISSELL.co.nz

Address: 789 Springvale Road,
Mulgrave, Victoria 3170

Email: consumercarenz@bissell.com

