SpotClean 5207 9749 7786

Solution Tank Leaking

- 1) Check to see if the solution valve is leaking. Make sure the black, round valve is not stuck and pushed up, causing the solution to leak out of the valve area. If it sticks, push the valve with your finger to see if it comes back down. If not, replace tank.
- 2) Check the entire solution tank to make sure there are no cracks or holes which could cause it to leak. If there are cracks/holes replace tank.