


My CrossWave® Cordless Multi-Surface Wet Dry Vac has a loud noise | Support

- When reclined, the brush will spin - this sound is normal
- When dirty tank is full, the float inside will activate and the motor pitch will change
- This sound is normal and the dirty water tank should be emptied
-
- While emptying the dirty water tank, rinse and manually move the float up and down to ensure it moves freely
- Also be sure to insert the filter completely in place (reinstall it)

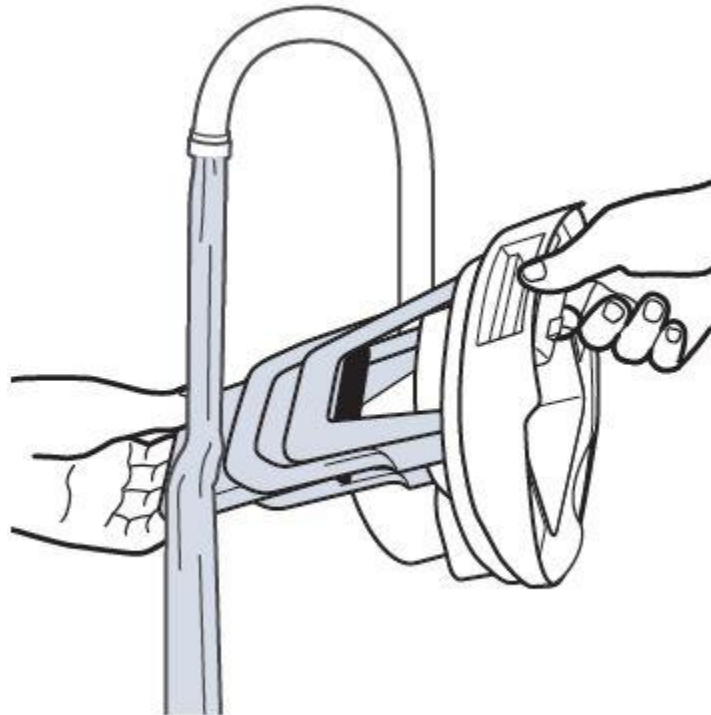

-
- With the machine turned off and unplugged, check to see if the front nozzle and brush roll are installed properly on the foot
- Spin brush roll by hand to verify smooth motion
- If the noise extremely loud or abnormal, contact us